


- 1** SUNSHADE
- 2** VELCRO PAD

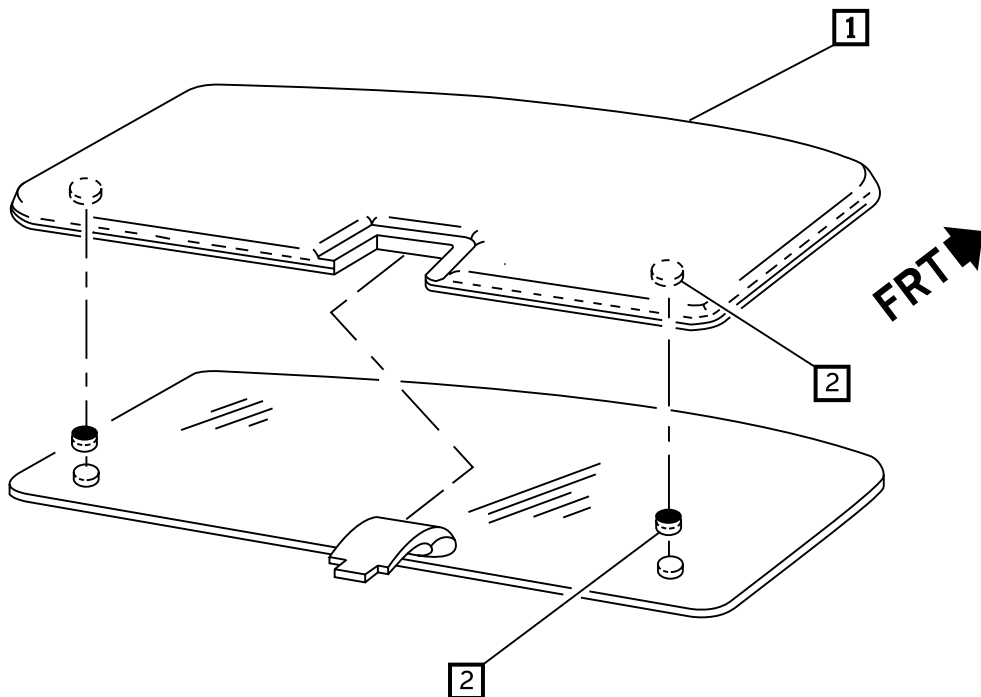

SUNSHADE PANEL INSTALLATION - PROCEDURE

1. REMOVE VISTA VENT GLASS PANEL FROM VEHICLE AS DIRECTED IN OWNER'S MANUAL.
2. PLACE GLASS PANEL ON TABLE: TOP SIDE DOWN. (USE A SOFT CLOTH ON TABLE TO PROTECT GLASS FROM SCRATCHING)
3. LOCATE ADHESIVE BACKED VELCRO BUTTONS ON CORRESPONDING VELCRO PATCHES ON SUNSHADE PANEL. REMOVE BACKING PAPER FROM VELCRO BUTTONS. LOCATE PANEL UNDER FLANGE OF LATCH MECHANISM AS SHOWN IN ILLUSTRATION AT LEFT. (USE CARE DURING THIS STEP SO THAT SUNSHADE PANEL REMAINS IN LOCATION FOR PROPER FIT TO HEADLINDER). LOWER PANEL INTO POSITION AND PRESS FIRMLY OVER VELCRO BUTTONS TO ENSURE PROPER ADHESION TO GLASS.
4. REINSTALL VISTA VENT AND LATCH MECHANISM AS INSTRUCTED IN OWNER'S MANUAL.

<b>FASTENER TORQUE</b>	<b>GENERAL INSTRUCTION NOTES</b>	<b>FIERO</b>		
1 2 3 T FULLY DRIVEN, SEATED & NOT STRIPPED	002727	<b>TITLE</b> SUNSHADE INSTALLATION INSTRUCTION		<b>SHEET</b> 1 OF 1
		<b>DATE</b>	<b>PART NO.</b> 10054992	